




LIGHTLY MOISTEN THE BASSWOOD LEADING EDGE (LE) STRIP AND GLUE WHILE STILL DAMP

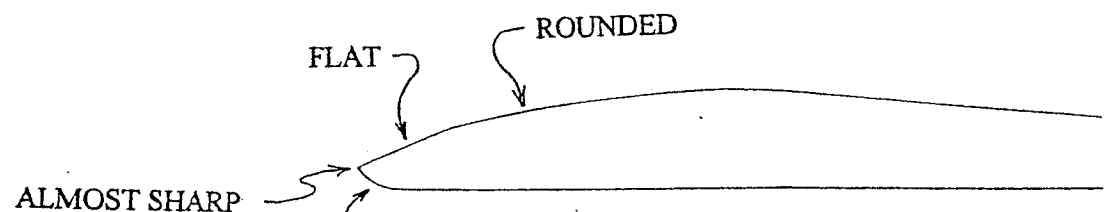

TO PRODUCE THE "FLAT" HOLD A SMALL SANDING BLOCK AT THE SAME ANGLE ALL THE WAY FROM TIP TO TIP - THE FLAT WILL GET SMALLER AS THE WING GETS THINNER


AFTER COMPLETING THE AIRFOIL RE-GLUE THE TOP OF THE LE WITH THIN CyA, WIPING OFF EXCESS WITH A TISSUE

OPTIONAL .75 OZ. FIBERGLASS TOP AND BOTTOM GRIP TIP ONLY

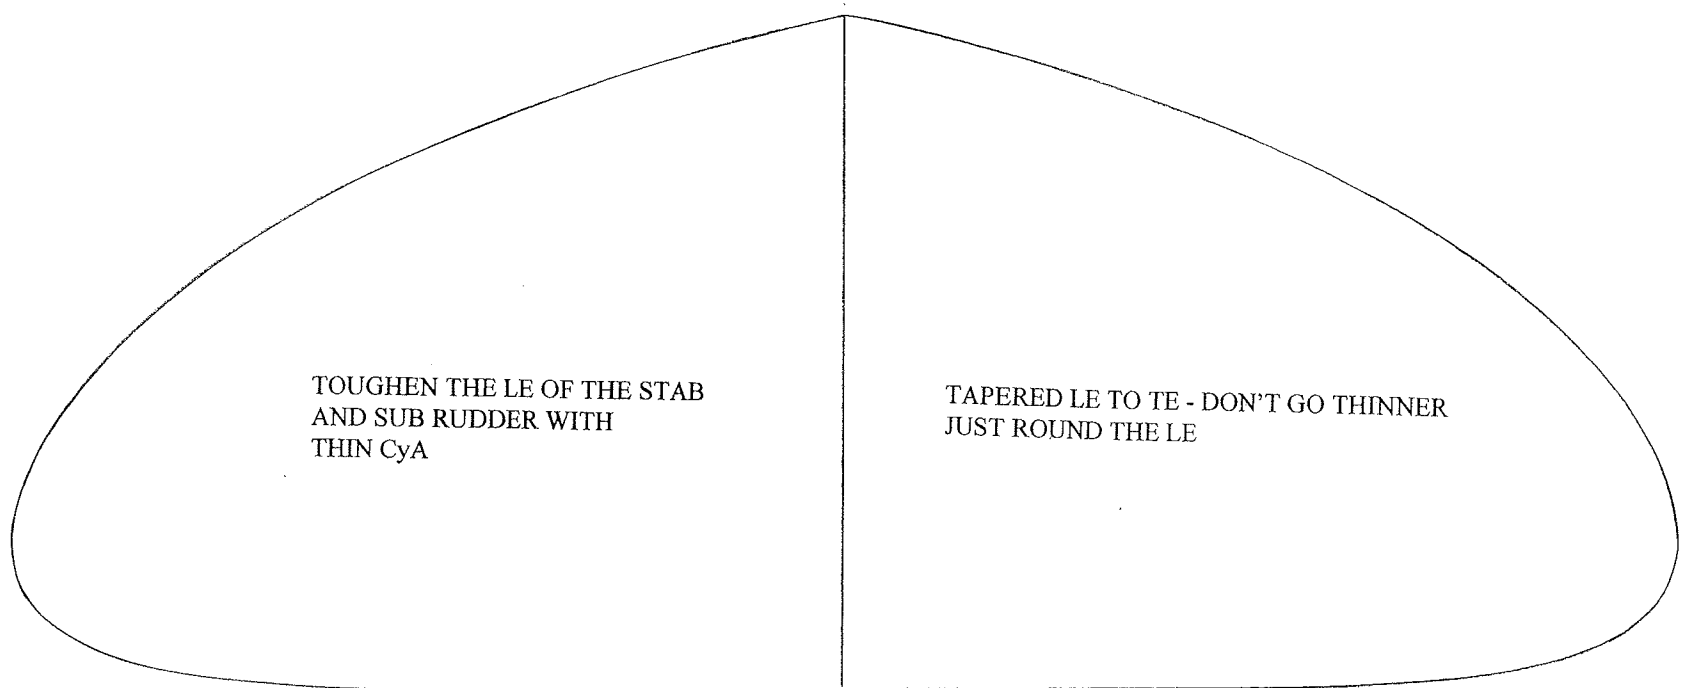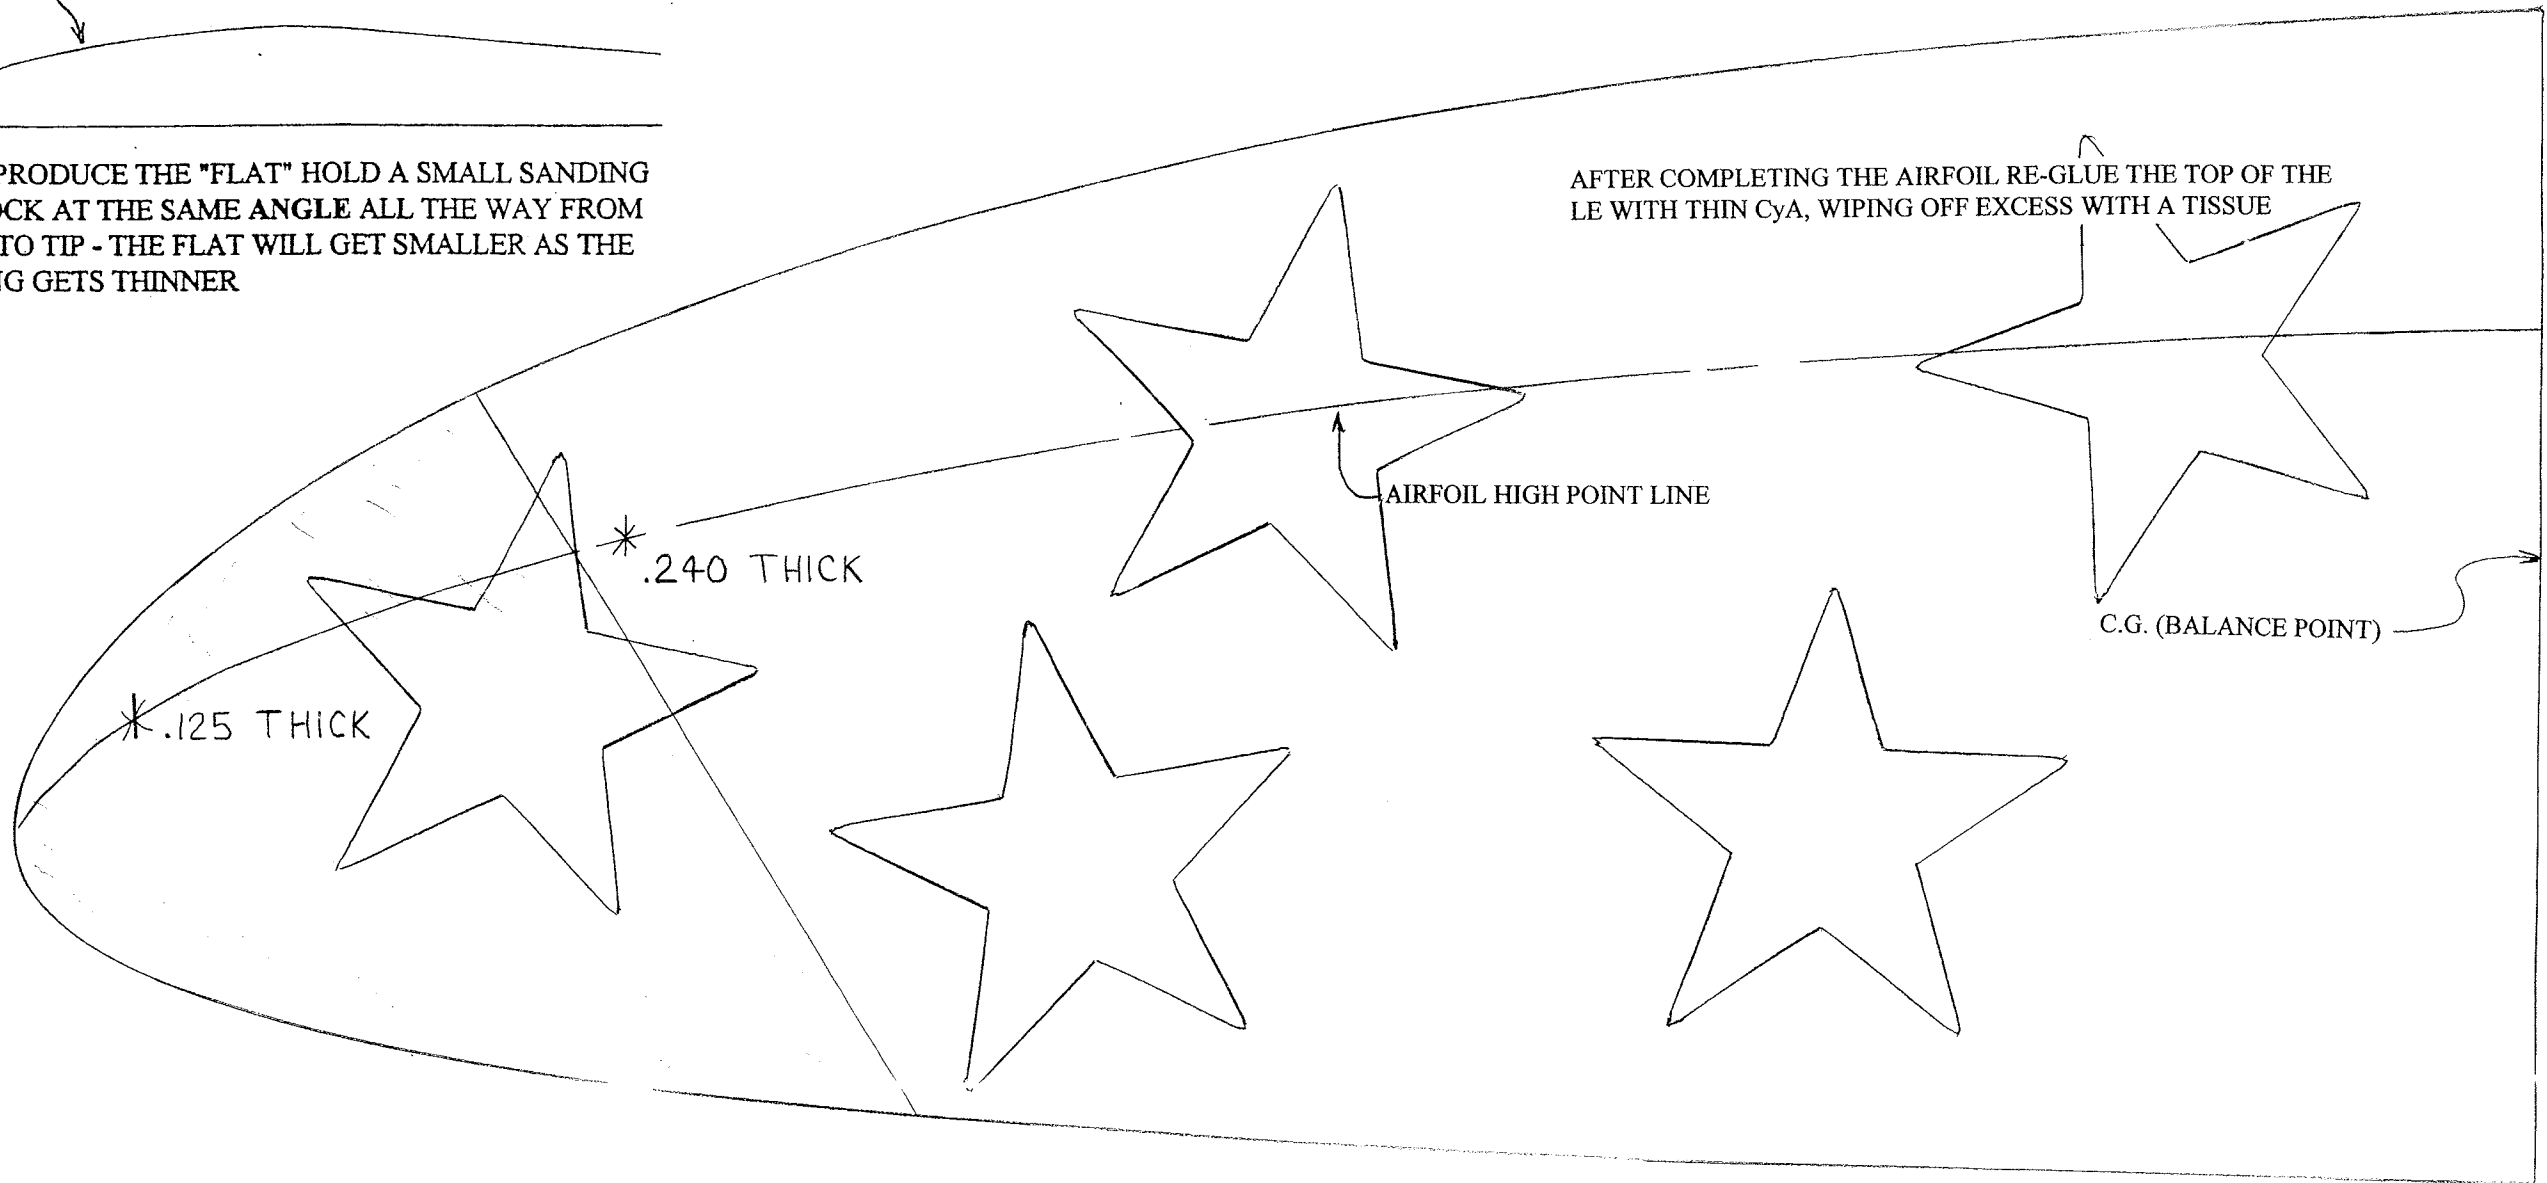


# WindenBox


by Stan Buddenbohm  
In honor of the famous Zweibox  
by John Oldenkamp

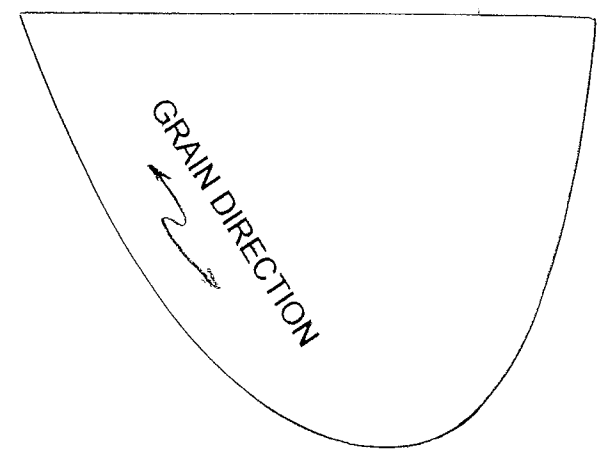



WINDENBOX

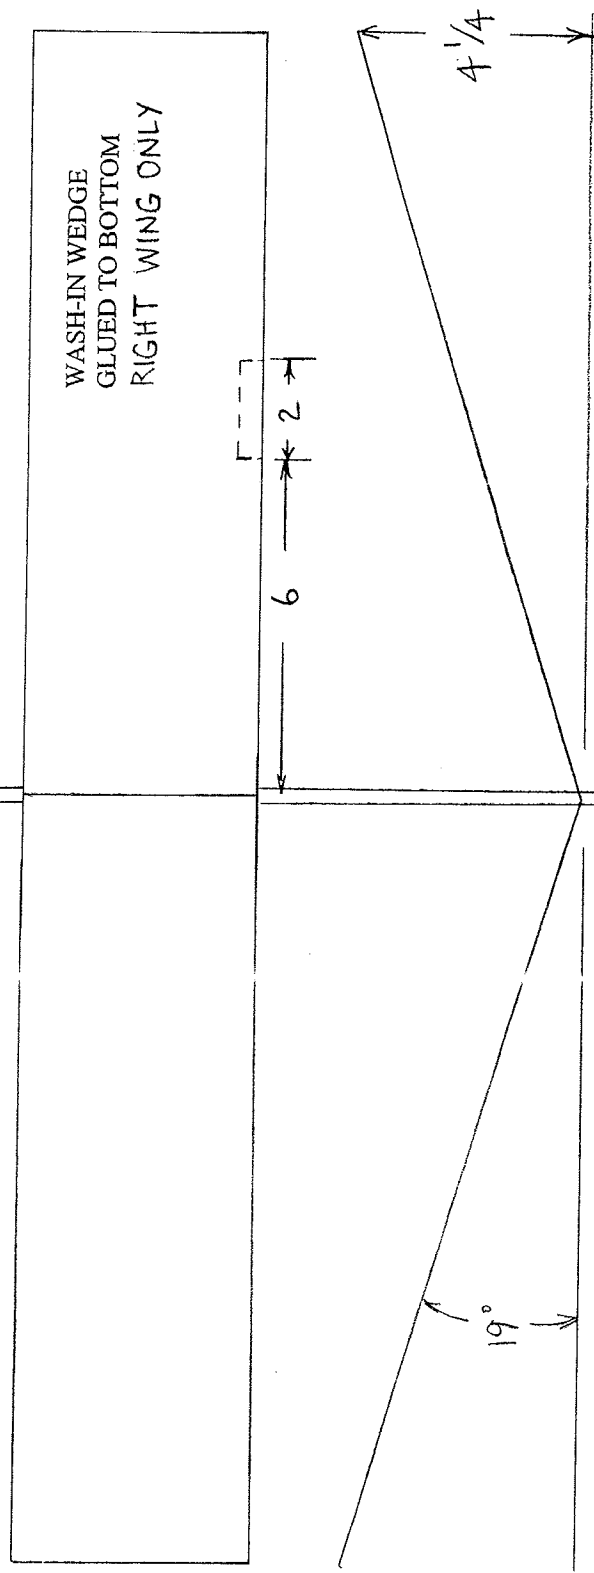

NO STABILIZER TILT NEEDED

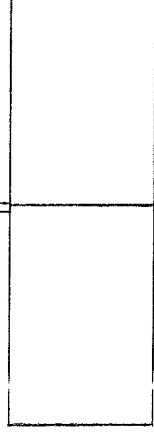

THE STAB MUST BE GLUED TO THE TAILBOOM AT A SKEW ANGLE. THE LE OF THE DIHEDRAL JOINT SHOULD BE GLUED 1/16 TO THE LEFT OF CENTER WITH THE TE OF THE DIHEDRAL JOINT ON THE CENTERLINE OF THE TAILBOOM.

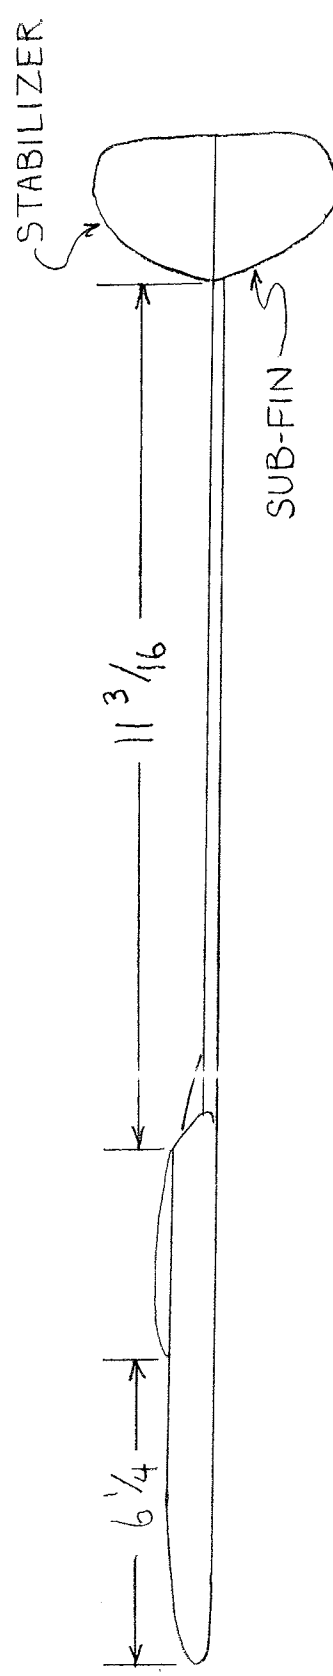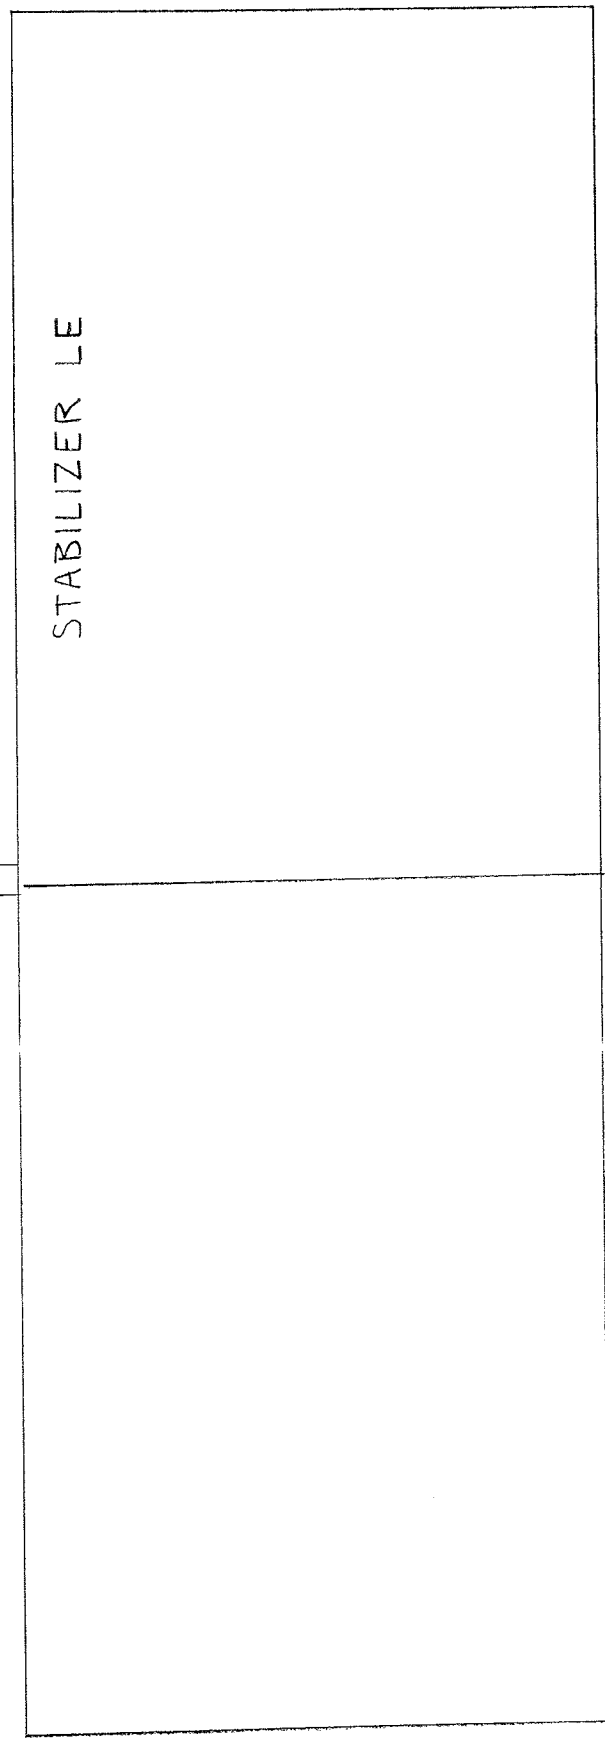

AT THE BOTTOM OF THE TAILBOOM BEND A FINGER WIDTH PORTION OF THE RUDDER TE TO ADD ABOUT 1/32 TO 1/16 INCH OF RIGHT TURN

WINDENBOX